CSS - V12

Face Recognition Machine User Manual

[Contents]

-V12 Instructions Manual -	1
Main screen	1
Function List	
Enter into the function list	
User Management	4
1. User	4
1-1 Add user	5
1-2 Edit / delete user	6
1-3 Delete all users	7
1-4 Number of registered user	7
2. Device	
2-1 General settings	9
2-2 Door settings	9
2-3 Reset Settings & USB	10
2- 3-1 Reboot	10
2-3-2 Back to factory default	11
2-3-3 Export	12
2-3-4 Import	13
2-4 Date and time14	
3. Communication	15
4. Information	16
5. Verification steps	17
5-1 Face Verification Mode	17
5-2 Process of using the function key to verify	
5-3. Face verification 1: 1 or 1: N	21

-V12 Instructions Manual-

Main screen

Standby main screen after power on, showing time and date and function keys, as shown below:



1. Setting icon: Login the administrator mode, it can add/modify users and set the terminal.

- 2. Keypad icon: Verify by password.
- 3. Return icon: Return to the previous page (can be selected by highlighting)
- 4. Portrait icon: After clicked, manually enter face recognition mode.
- 5. House icon: Return to the main screen (can be selected by highlighting)

Common password verification: Click on keypad icon \rightarrow touch " ID / P " to the common password page \rightarrow after imported the common password, click V to confirm, as shown below:



Personal password verification: Click on keypad icon \rightarrow enter user ID and confirm by V \rightarrow enter password and confirm by V, as shown below:





Function List

Enter into the function list



Click the set symbol on the left side of the standby screen, enter the administrator password page, enter the password, and after entered, click the confirmation key ↓ or v. (Note: Default administrator password: 123456)



- Enter the password to enter the administrator page, as shown on the left:
- 1. User: Add, edit and delete user.
- 2. Device: The device can be set in General setup, Door setup, USB backup/restore and Time setting.
- 3. Communication: Return to the previous page (can be clicked by highlighted)
- 4. Information: Displays the Registration number, Access log, System log and Device information.

User Management

➤ 1. User

1. Click the "User" in function list, it can manage user, as shown below:



2. Enter the "User " in the function menu , as shown below:



- 1. Add user: add user and register face or card
- 2. Edit / delete user: single user can be modified or deleted
- 3. Delete all users: Click to delete all users
- 4. Number of registered user: Shows the number of registered users and registered faces

1-1 Add user

1. Enter the Function menu of " Add user ", it will display the user registration project, as shown below:



- 1. User ID : The user ID cannot be blank, and it can enter a value from 1 to 4294967295
- 2. Card no. : Enter the card number or directly click the card icon below to register the card
- 3. Password : Enter the user password
- 4. Password confirmation: Enter the password again to confirm the user password
- 5. Status : Activate / Deactivate, set the user status to enabled or disabled
- 6. Scanning: It can register face or swipe card to register
- 2. Click the confirmation button "V" after the registration is finished.
- * Please register face in the frame. The size of the face should be same with the frame. And follow the steps as below to register, follow the device indication to move up and down or right and left slightly.



Color indication: **Green**: Face detected **Red**: Face undetected **Blue**: Human face was originally detected but not detected subsequently **Yellow**: Human face is detected, but the capture feature is unsuccessful, re-capturing

1-2 Edit / delete user

1. Enter into the "Edit / delete user", follow the steps, enter user ID and click delete / edit, as shown below:



- 1. X icon: delete user
- 2. Edit icon: edit user

2. If you want to edit a user, after entering the user ID, click the edit icon, it will enter the edit page, you can modify the user information, as shown below:



- 1. User ID: User ID
- 2. Card number: Enter the card number or directly click the card icon below to register with the card
- 3. Password: Enter the personal password
- 4. Password confirmation: Enter the password again to confirm the user password
- 5. Status: Activate / Deactivate, set the user status to enabled or disabled
- 6. Scanning: It can register face or swipe card to register
- 3. Delete the user: Enter the user ID, click the delete icon, you will be asked to confirm the deletion, click YES to confirm, to delete user.

1-3 Delete all users

Enter "Delete all users", you will be asked if you want to confirm the deletion. Click YES to delete all users, as shown below:



1-4 Number of registered user

Click on "Number of Register able User", the number of registered users and the number of registered faces will be displayed, as shown below:

(* Note: 20,000 users can be registered, and 2,000 faces can be registered)



> 2. Device

1. Click "Device" in the function menu to set the device, as shown below:



2. Enter "Device" in the function menu, as shown below:



- 1. General settings: Set device parameters such as volume, brightness, language and face authentication mode, etc.
- 2. Door setup: Set the door open / close, delay time of relay and enable Bypass mode, etc.
- 3. Reset settings & USB: Reset device and USB backup and restore data
- 4. Date and time: Set the date and time of the device

2-1 General settings

1. Enter the "General Settings" of the function menu, and the device setting items will be displayed, as shown below:



- Volume: Adjust the volume of the device, pull down the menu 0
 ~ 5, the larger number is the louder, 0 is mute.
- 2. Brightness: Adjust the brightness when operating the device. The pull-down menu is $0 \sim 5$, the larger number is the brighter.
- 3. Standby brightness: Adjust the standby brightness, pull down the menu $0 \sim 2$, the larger number is brighter.
- Language: Set the device language to English / Traditional Chinese / Simplified Chinese, pull down menu ENG / CHT / CHS.
- 5. Face recognition mode: Set face recognition to automatic / manual / function key verification , pull down menu Auto / Manual / Function Key Trigger Mode
 (Note: Refer to 5-1 for how to use face authentication mode)
- 2. Click the confirmation key V when the setting is completed.

2-2 Door settings

• Enter the "Door Settings " of the function menu, as shown below:



- Door open delay time: Set the power open relay time, the factory default value is 10 seconds, can be set from 0 to 255 seconds.
- Door close delay time: Set the alarm time when the door is not closed (the door magnetic detection needs to be enabled). The factory preset value is 10 seconds, which can be set from 0 to 255 seconds.
- 3. Relay delay time: Set the reset time of the door lock relay (the door magnetic detection is required). The factory preset value is 0 seconds, which can be set to 0 ~ 255 seconds.
- 4. Door magnetic detection method: Disable / Enable, the default value is Disable.
- 5. Bypass: Disable / Enable. The default value is Disable.

2-3 Reset Settings & USB

• Enter " Reset Settings & USB " in the function menu , as shown below:



- 1. Reboot: The device reboots after clicking.
- 2. Back to the factory default: Click to reset the device setting back to the factory preset value.
- 3. Export: Save system settings / user data / access log and export to USB
- 4. Import: Use USB to import the system settings / user data backup file to the device.

2-3-1 Reboot

 Click "Reboot ", it will appear again whether to confirm the execution, click YES to restart the device, as shown below :



2-3-2 Back to factory default

Click " Back to factory default ", the device will return to the factory preset value. You can check the options you want to keep, as shown below:



- 1. Reserve TID: Reserve terminal ID
- 2. Reserve terminal website / web port number : Reserve terminal IP / web port number (default IP 192.168.0.66/port80)
- 3. Keep software URL / port number : Keep software IP / software port number (default port2000)
- 4. Reserve user information
- 5. Access log
- 6. Reserve system log
- 7. Reserve group / time zone / time set / holiday

2-3-3 Export

 Click "Export ", select the data to be backed up, and export the data to USB, as shown below



 System profile: Including terminal settings, communication settings, time zone and door settings, etc.
 User information Note: The export format of system setting file and user data is for device reading format. Import data can only be imported by device USB.
 Access log

Note: The txt file exported from the access log can be imported by SOMAC

Login SOMAC \rightarrow Tool \rightarrow Import \rightarrow Import Entry log from USB Backup, as shown below

Terminal Control Center	Add Modify	SystemLog System Info		Group (Change Terminal G	oup Look Up	Check Network Up	ograde Firmware Op	tion Refresh	
	All	Terminal SysLog		mallD	TerminalName	IP Address	Msc Address	SerialNo	ModelName	FirmwareVersi
		Acount	•							
		Import		Wa	ard - Import Guest	Data	1			
		Backup And Restore		From Old Version Wizard - Import From BFSystem						
	C S S S	Database Connection								
		Email Alarm Configuration	1	Im	port Entrylog From	Usb Backup	1			
		SMS Alarm Configuration								
		Option Advanced Configuration								

2-3-4 Import

Click "Import " and use USB to import the system settings / user data backup file to the device.



- 1. System profile: Including terminal settings, communication settings, time zone and door settings, etc.
- 2. User information

2-4 Date and time

• Click " Date and time " to enter the device time setting page.



Date: Year / month / day
 Time (24H) : Hours / minutes / seconds

> 3. Communication

• Enter " Communication " in the function menu, the communication information will be displayed, as shown below:

CSS			13:29:45
DHCP: 🧕 IP依址:	FF 192.168 (TID:	
子網路邀	1: 25	5.255.255	0
預設開道: DNS:	192.1	68.0.1 5.1.1	
軟體IP:	0.0.0.0		
通訊埠:	2000		
	8	9	
1	2	3	
0		•	
3	×	~	A

- 1. The DHCP: Dynamic Host Configuration Protocol set OFF / ON
- 2. TID: Terminal number
- 3. IP address: Terminal IP (default IP 192.168.0.66)
- 4. Subnet mask: Device subnet mask address
- 5. Preset gateway: The preset gateway address of the device
- 6. DNS: DNS address of the device
- 7. Software IP : Software IP address
- 8. Communication port: Software communication port (default port2000)

> 4. Information

Enter " Information " in the function menu, it will show system information , as shown below:



- 1. Registered user: Show the number of registered users (Max: 20000)
- 2. Access logs: Show the current access logs (Max: 200000)
- 3. System log: Display the current system log (Max: 10000)
- 4. Boot code version: Boot loader version
- 5. Hardware version
- 6. Serial number: Equipment serial number
- 7. Firmware version
- 8. Firmware Date
- 9. MAC address

> 5. Verification steps

5-1 Face Verification Mode

There are three modes of face recognition mode, Auto (manual verification), Manual (manual verification), Function Key Trigger Mode (function key verification)

- 1. **Auto** (automatic verification) : When the face machine detects the face, it will automatically start verification.
- 2. **Manual** (manual verification): Click the verification icon before the face machine will start face verification



3. **The Trigger Mode Key Function** (function key verification): After clicked function key, it will be face verification.

***** Note: This mode only supports F 1 ~ F4 keys, not support function keys + numbers.



5-2 Process of using the function key to verify

Click F1 ~ F4 to start face / swipe / password verification (if there are numbers, select F1 ~ F4, then press keypad, enter the function key to enter numbers, and then start verification)



Face/Card/Password verification – Function key

- Face verification To use the function keys: Click the function key and start face verification (because in the automatic verification mode, it may be too late to press the function key to automatically detect the verification. It is recommended to use the function keys for face verification, optional manual or function key verification)
- i. Manual face verification function key operation: After clicking the function key, click the face verification icon , as shown below



- ii. Function key verification mode Function key operation : Click the function key to enter face verification mode
- 2. Swipe to verify Using the function key: Click the function key and then swipe to verify

3. Password verification - Using the function keys:

i. After tapping the function key – tap the keypad



ii.It will pop out the enter function key number page \rightarrow click "ID/P" to switch the input user ID page \rightarrow after entering the user ID, click V to confirm



iii. After entering the user password, click V to confirm



5-3. Face verification 1: 1 or 1: N

The face verification preset comparison is 1 : N, To use 1: 1 verification, the steps are as follows Tap the keypad \rightarrow enter user ID \rightarrow tap the icon of face verification, than start 1: 1 face verification.





